

# 4K Premium Set-top box

ICU 100



## Set-top box description




- 1 Power button
- 2 Signal LEDs:
  - Sieć (network) – lights up when the decoder is connected
  - Eco – Lights up when Economy mode is on
  - PVR – Lights up when PVR drive is connected
- 3 Digital display
- 4 USB port (for removable memory content)
- 5 Analogue TV connector
- 6 For audio system connection
- 7 For TV connection
- 8 For PVR drive connection
- 9 For FunBox connection
- 10 On/Off switch
- 11 Power supply socket
- 12 Wi-Fi configuration button

## Remote control description



- 1 List of favorites channels
- 2 Video on demand (VOD)
- 3 Recorder menu (PVR)
- 4 Previous screen
- 5 Inbox
- 6 Previous channel
- 7 Channel list selection
- 8 TV guide
- 9 Information about the current program
- 10 Exit

# Set-top box connection

1. Connect the set-top box to the TV using an HDMI® cable. Set the signal source on the TV to the same HDMI port you have connected set-top box. Use the button with icon  or the one with the SOURCE icon on TV remote control.

Optional: If your TV does not have a HDMI port, connect the audio/video cable to the AV OUT jack (both not included). If the TV doesn't have Cinch sockets, you will need a SCART-Cinch adapter.

2. If you are using a PVR drive, plug it into the USB port on the rear panel of the set-top box.
3. You can connect your audio system with a TOSLINK optical cable - SPDIF socket (cable not included).
4. Plug the power supply unit into the appropriate socket.



## Connection to gateway

- or
- 5a. Connect the Ethernet cable to the Modem socket of set-top box. Plug the other end of the using cable into the black socket in FunBox. Then turn on the set-top box with the ON/OFF switch 6.
  - 5b. If you want to connect the set-top box wirelessly via Wi-Fi, locate the WPS button on the rear panel of the set-top box 5b., turn on the set-top box 6. and follow the on-screen instructions (in Polish) 7.

